

## CAVITY CONVERTER

Ordering Code:	<b>AT-Y-Z</b>	<b>08W-2 Cavity to 8A-2 Cavity Converter</b>				
		<table border="1"> <tr> <th>Y</th> <th>Outside CAVITY-THREADS</th> </tr> <tr> <td><b>08W2</b></td> <td>3/4"-16UNF-2A</td> </tr> </table>	Y	Outside CAVITY-THREADS	<b>08W2</b>	3/4"-16UNF-2A
		Y	Outside CAVITY-THREADS			
<b>08W2</b>	3/4"-16UNF-2A					
<p>Illustrations / detail are for reference only. Data subject to change.</p>		<table border="1"> <tr> <th>Z</th> <th>Inside CAVITY-THREADS</th> </tr> <tr> <td><b>8A2</b></td> <td>M16x1.5</td> </tr> </table>	Z	Inside CAVITY-THREADS	<b>8A2</b>	M16x1.5
		Z	Inside CAVITY-THREADS			
<b>8A2</b>	M16x1.5					

Ordering Code:	<b>AT-Y-Z</b>	<b>12W-2 Cavity to 8A-2 Cavity Converter</b>				
		<table border="1"> <tr> <th>Y</th> <th>Outside CAVITY-THREADS</th> </tr> <tr> <td><b>12W2</b></td> <td>1-1/16"-12UN-2A</td> </tr> </table>	Y	Outside CAVITY-THREADS	<b>12W2</b>	1-1/16"-12UN-2A
		Y	Outside CAVITY-THREADS			
<b>12W2</b>	1-1/16"-12UN-2A					
<p>Illustrations / detail are for reference only. Data subject to change.</p>		<table border="1"> <tr> <th>Z</th> <th>Inside CAVITY-THREADS</th> </tr> <tr> <td><b>8A2</b></td> <td>M16x1.5</td> </tr> </table>	Z	Inside CAVITY-THREADS	<b>8A2</b>	M16x1.5
		Z	Inside CAVITY-THREADS			
<b>8A2</b>	M16x1.5					