CARTRIDGE VALVES ACCESSORIES

Directional Valve Manual Rotary Components - Installation Instructions

Assembly Drawing: ∗Please following the instruction to tighten screw.

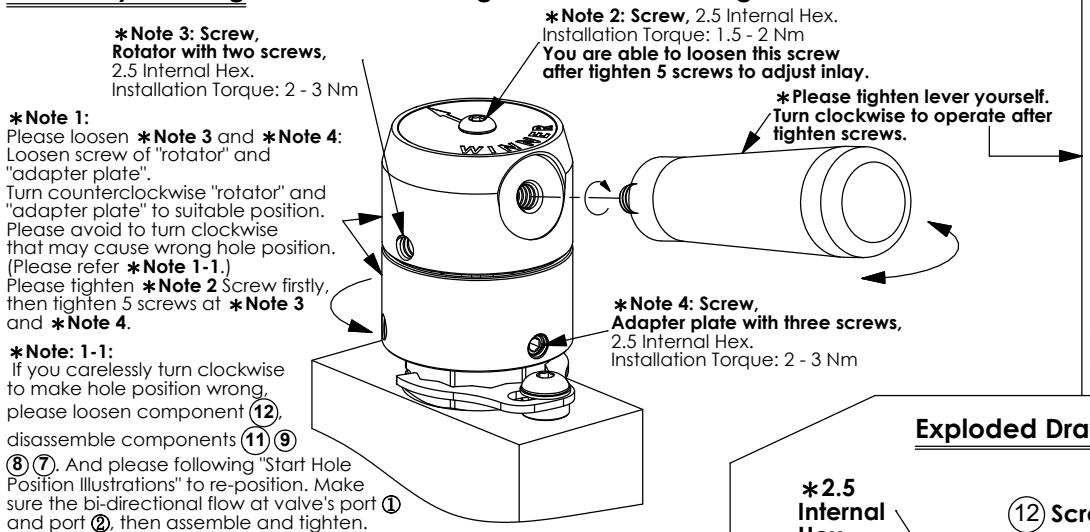

Example:
DR-10W-3A-11-R-1

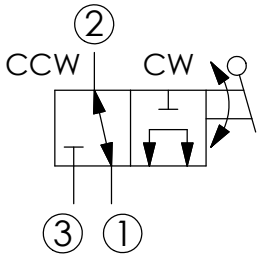

· Turn CCW, port ② to port ①.
· Turn CW, port ③ to port ①.

Start Hole Position Illustrations:

2-Position Knob, 0° - 90°

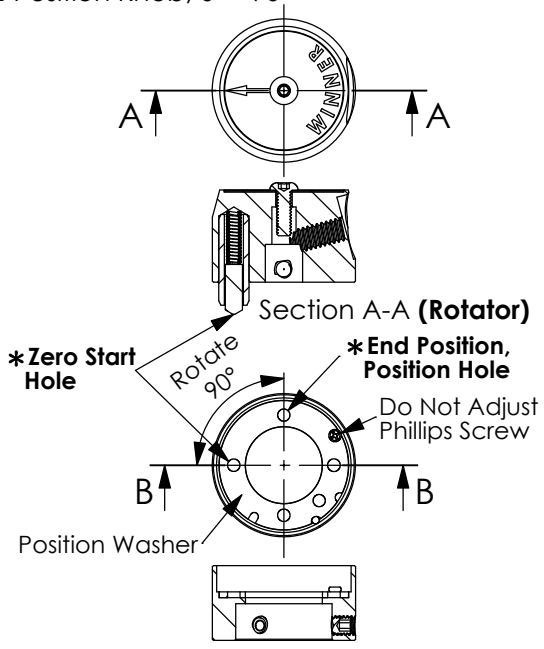

Exploded Drawing:

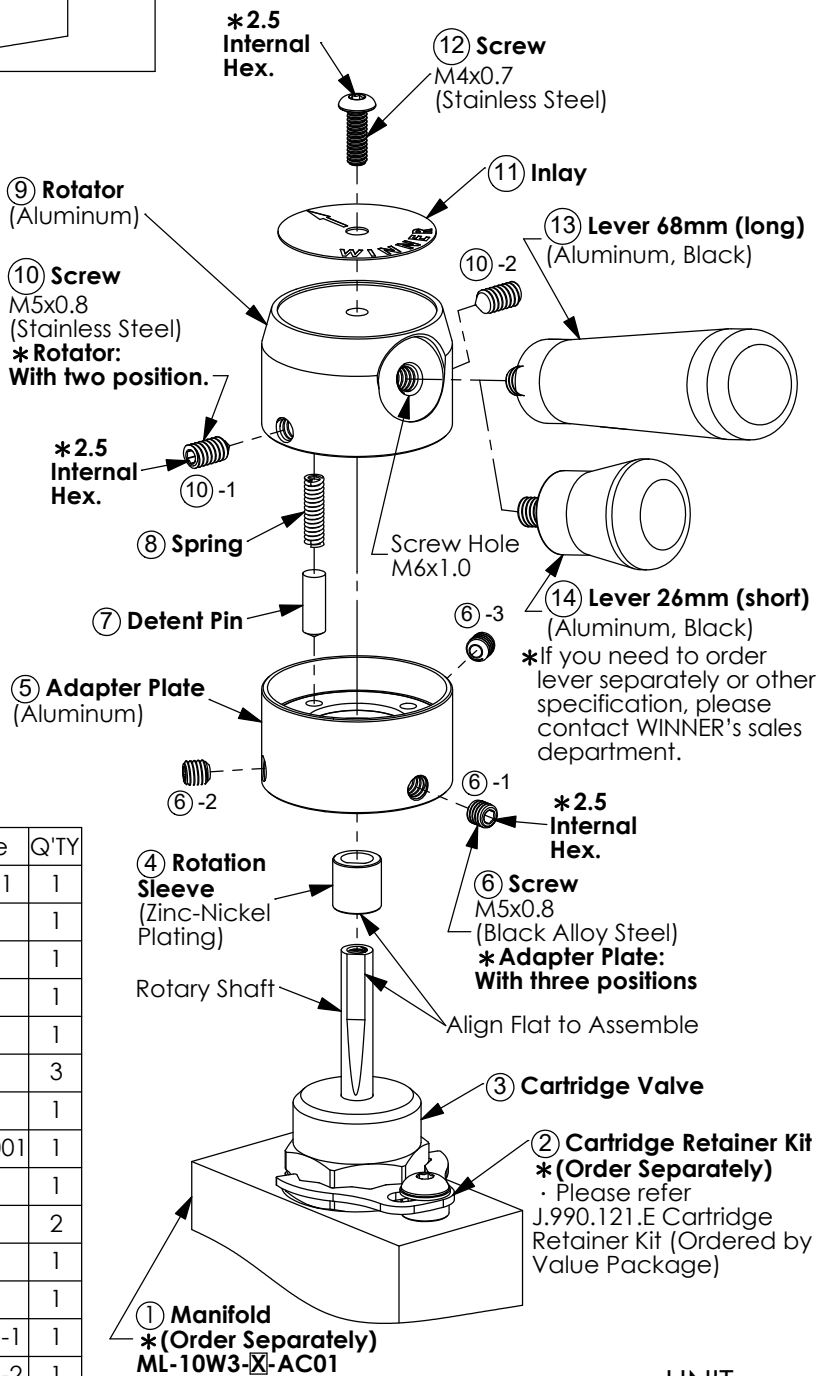

Item	Product Name	Ordering Code	Q'TY
①	Manifold (Order Separately)	ML-10W3-X-AC01	1
②	Cartridge Retainer Kit (Order Separately)	7ZE2540C002	1
③	Cartridge Valve	DR-10W-3A-11	1
④	Rotation Sleeve	6GX09A10001	1
⑤	Adapter Plate (Sub-Assembly)	7GX37A19001	1
⑥	Screw M5x0.8 (Black Alloy Steel)	5DBM05A001	3
⑦	Detent Pin	6GX04A13001	1
⑧	Spring	4DA0307A0072001	1
⑨	Rotator (Sub-Assembly)	7GX37A24001	1
⑩	Screw M5x0.8 (Stainless Steel)	4DCM05E006	2
⑪	Inlay	3AA008	1
⑫	Screw M4x0.7 (Stainless Steel)	4DCM04N001	1
⑬	Lever 68 mm (long) (With Lever)	DR-10W-3A-11-R-1	1
⑭	Lever 26 mm (short) (With Lever)	DR-10W-3A-11-R-2	1

UNIT:mm