


## SOLENOID OPERATED VALVES NUT ACCESSORIES

(Apply  $\emptyset$  12.7 mm Tube, M12x1.25, Apply Coil EC-04W)

### PC Cover For Safety Push Style "P"

To operate manual override, screw out the knob protection after removing lockwire (if any) and push and hold override button.


To return to normal valve operation, simply release the button.

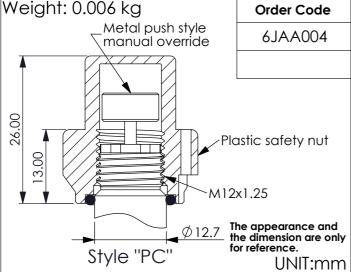


# MC Cover For Safety Screw-Out Knob Style "M"

To operate manual override, screw out the knob protection after removing lockwire (if any) Turning it counterclockwise.

To return to normal valve operation, turn the knob clockwise.

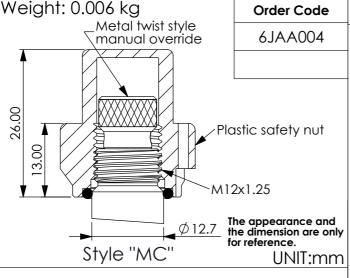


#### Plastic Nut For Style "Non-adjustable"

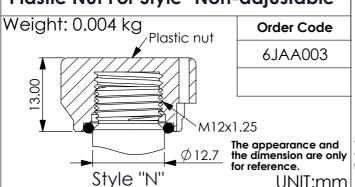


## TC Cover For Safety Push And Twist Style"T"

To operate manual override, screw out the knob protection after removing lockwire (if any), then push the override button and turn clockwise to hold.

To return to normal valve operation, push override button, turn counterclockwise and release.

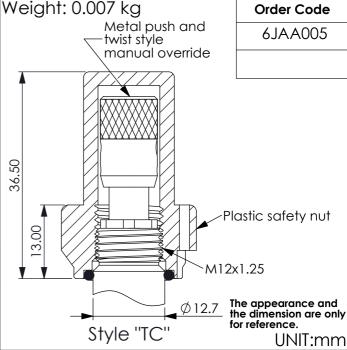

#### Plastic Nut For Style "M", "P" & "T"

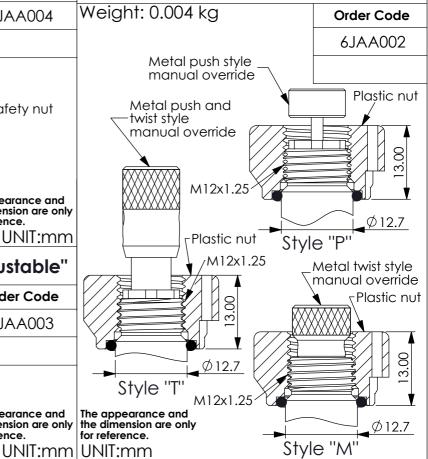

Rev.211116 J.990.111.E