



SOLENOID OPERATED VALVE

(Pilot Operated)

(Poppet 2-Way Normally-Open Cartridge Style)

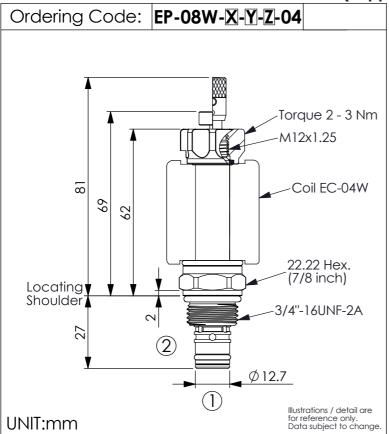

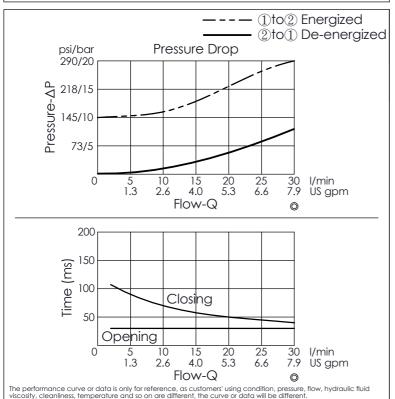


Y	OPERATION		
02	Normally-Open No Reverse Flow De-energized		
In de-energized condition, this valve is allowed flow from port $\textcircled{2}$ to port $\textcircled{1}$			

but it's difficult to pass that flow from port ① to port ②.

This valve is similar to check valve when energized. Allow free flow from port ① to port ② and block flow from port ② to port ①.

If you need bi-directional flow, please refer Y=06.

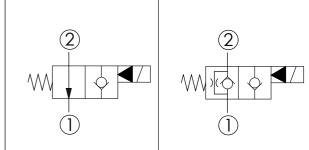

TECHNICA	LDAIA	
Max.Operating pressure: 350		bar
Rated flow:	30	I/min
Cavity-Tooling:	08W-2	
Installation torque:	39 - 51	Nm
Weight:	0.107 (Z =N	1) kg
	Max.Operating pres Rated flow: Cavity-Tooling: Installation torque:	Cavity-Tooling: 08W-2 Installation torque: 39 - 51

Internal Leakage Approximately: 0.15 cc/minute (3 drops/minute) max. at 350 bar

Hydraulic Fluid Viscosity · Cleanliness · Temperature Level: Please refer WINNER technical information. (T.101.101.E HYDRAULIC FLUID (A)VISCOSITY) (T.101.102.E HYDRAULIC FLUID (B)CLEANLINESS) (T.101.103.E HYDRAULIC FLUID (C)TEMPERATURE)

Minimum Voltage Required: 90 % of nominal

Coils must be ordered separately

Mounting Position: unrestricted

X	STRUCTURE	
2A	2 Ports · 20 Watt. Coil ∅ 12.7 mm tube	

Push Style Manual Override Push and Twist Style Manual Override Push and Twist Style Manual Override (For emergency or test use only. Please keep at the normal operational position after turning counterclockwise.) (A larger force is required for downward push during high-pressure operations, please contact Winner's sales	Z	OPTIONS		
Push and Twist Style Manual Override (For emergency or test use only. Please keep at the normal operational position after turning counterclockwise.) (A larger force is required for downward push during high-pressure operations, please contact Winner's sales	N	Non-adjustable		
Manual Override (For emergency or test use only. Please keep at the normal operational position after turning counterclockwise.) (A larger force is required for downward push during high-pressure operations, please contact Winner's sales	Р			
, ,	T	Manual Override (For emergency or test use only. Please keep at the normal operational position after turning counterclockwise.) (A larger force is required for downward push during high-pressure operations,	D 102 102 E	